



Maxicomfort Lift Chairs Flash Codes

1. flash- in memory mode
2. flash overload (probably a disconnected cord)
3. flash low voltage (probably unplugged)
4. flash need recalibrations at the factory. (Request RMA from Golden)

